
Fuel Injectors wiring example

4 CYL Batch Fire & Sequential

The RM-Primis firmware configured from RM-Tuner allows you to configure your firing order and automatically calcul0ates the angles to fire your injectors, the injectors should be wired following the injector number to injector output order 1-1,2-2,3-3 etc and the firmware will take care of the rest

Injectors 12v to be supplied from a relay


1-3-4-2 Batch Fire

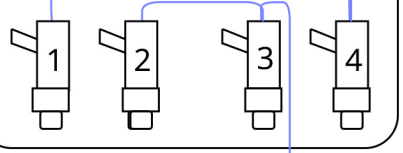

For batch fire injection you have to connect the injectors in pairs to the ecu outputs.
To find out what injectors to pair just write down the firing order and below it write the injector outputs to use.


Example:

Firing order 1-5-3-6-2-4
Output to use 1-2-3-1-2-3

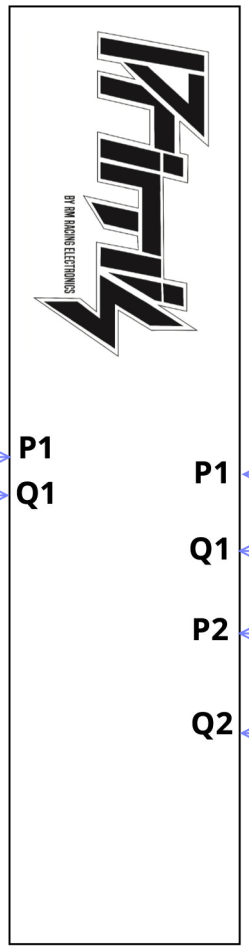

Injectors 12v to be supplied from a relay

1-3-4-2 Sequential

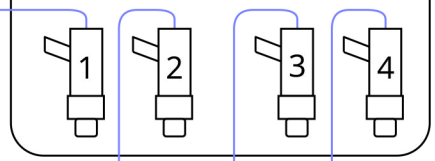

For a different number of cylinders just follow the same principles and configure your ecu on RM-Tuner.

RACING ELECTRONICS

For more technical information and support please visit help.primis-ecu.co.uk

RM-Primis & RM Racing Electronics are trademarks of RM Racing Electronics LTD, all rights reserved